



How to Connect Radio Bridge LoRaWAN Sensors

VERSION 1.1
SEPTEMBER 2018

TABLE OF CONTENTS

1. OVERVIEW	2
1.1. Introduction	2
1.2. Stand-Alone vs Network Provider	2
1.3. Revision History	2
1.4. Document Conventions	2
2. MACHINEQ	3
2.1. Using Radio Bridge Console	3
2.2. Without Using Radio Bridge Console	3
3. STAND-ALONE MULTITECH MULTICONNECT® CONDUIT AP/AEP	3
3.1. Add Gateway to the Console	4
3.2. Bring the Gateway Online	4
3.3. Update Gateway Firmware	4
3.4. Enable the LoRa Network Server	5
3.5. Configure Node-RED	6
3.6. Add Devices to Gateway	7
3.7. Add Devices to the Console	8
4. GENERAL THIRD-PARTY NETWORK SERVER	8
4.1. Sensor to Network Server	8
4.2. Network Server to Radio Bridge Console	9
5. TRADEMARKS AND COPYRIGHT	10
6. DISCLAIMERS, WARRANTY, AND CUSTOMER SUPPORT	10
6.1. Disclaimers	10
6.2. Warranty	10
6.3. Customer Support	10

1. OVERVIEW

1.1. Introduction

The wireless sensors designed and manufactured by Radio Bridge provide full sensor to cloud solutions for Internet of Things (IoT) applications. Radio Bridge LoRaWAN sensors can connect to a variety of LoRaWAN compliant network servers, located either on a local gateway or as a cloud-based network server. From there, the sensor messages can be sent to the Radio Bridge web-based console or a third-party application. This document provides instructions for connecting LoRaWAN sensors using several different methods.

For more information on the web-based console, visit <https://console.radiobridge.com>

1.2. Stand-Alone vs Network Provider

A network provider for LoRaWAN will set up LoRa base stations and charge for accessing their network much like a cell phone provider will charge to connect your phone to their network. In some cases, however, it may be desirable to set up a stand-alone gateway that does not use a network provider. Reasons for this may include lack of coverage in remote area or simply reducing the cost when there are many sensors in the field.



1.3. Revision History

Table 1 Revision History

Revision	Date	Description
1.0	August 2018	Initial release of the document
1.1	September 2018	Added section for general gateways

1.4. Document Conventions

Table 2 Document Conventions

Font / Icon	Meaning
	Important notes
	Warnings and cautions

2. MACHINEQ

machineQ is a LoRaWAN connectivity service from Comcast. The machineQ network servers are located in the cloud, and the machineQ gateways forward packets between the network server and the LoRaWAN sensors. There is no configuration required on a machineQ gateway, just plug it in and it is ready to go.

2.1. Using Radio Bridge Console

If the Radio Bridge console is used to monitor and configure sensors, simply log into the console and select the Devices tab on the left side of the page and click “Add New Device”. From there follow the prompts to select LoRa and the machineQ service. Once the device has been added, you will see sensor messages appear in the console.

2.2. Without Using Radio Bridge Console

If the Radio Bridge console is not used, and sensor messages will be sent directly from the end customer’s machineQ account to a third-party application, please refer to the section “General Third Party Network Server” for the parameters required to add the device to the machineQ back end. Additional parameters required for the machineQ configuration are shown in the following table.

Table 3 Additional Parameters for machineQ Setup

machineQ Parameter	Description
Device Profile	LoRaWAN 1.0.2 Class A 20dBm
Decoder Type	Use “Unknown”
DevAddr Assign	Dynamic

3. STAND-ALONE MULTITECH MULTICONNECT® CONDUIT AP/AEP

This section describes the steps necessary to connect a stand-alone Multitech Multiconnect Conduit AP or AEP LoRa gateway to the Radio Bridge console. In the stand-alone configuration, the network server is located on the local gateway and messages are sent to the Radio Bridge console using a custom configuration in Node-Red.

3.1. Add Gateway to the Console

This first step is to create security credentials for a new stand-alone gateway so that it can connect to the Radio Bridge console.


Log into the Radio Bridge console at console.radiobridge.com, select the Gateways tab on the left side, and click “Add Gateway”.

Follow the menu to select the correct gateway model, in this case the Multitech Multiconnect AP/AEP gateway.

3.2. Bring the Gateway Online

To bring the gateway online, refer to the standard setup instructions from Multitech. Note that the gateway may default to a static IP of 192.168.2.1.

In this case, we are assigning the static IP address 192.168.0.10 with the Gateway and DNS server set to the local DHCP server. After configuring the network settings, an https:// may be required to access the gateway.

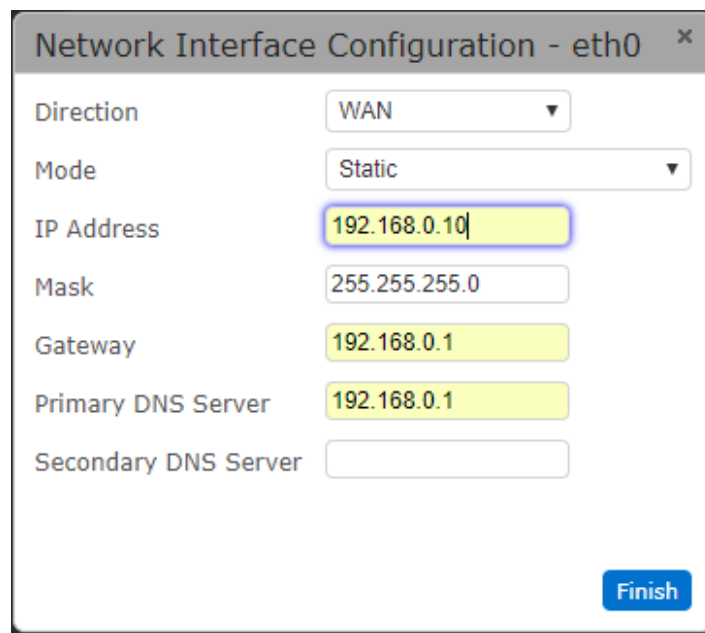


3.3. Update Gateway Firmware

Verify that the gateway is running firmware version 1.4.17 or later. If it is not, follow the Multitech instructions for upgrading the system firmware before proceeding to the next steps.

3.4. Enable the LoRa Network Server


Navigate to the LoRaWAN tab on the left side of the screen, select network settings, and under Mode select “Network Server”.

The default settings should be in the correct state, but double check that the Channel Plan is “US915” and the network mode is set to “Public LoRaWAN”

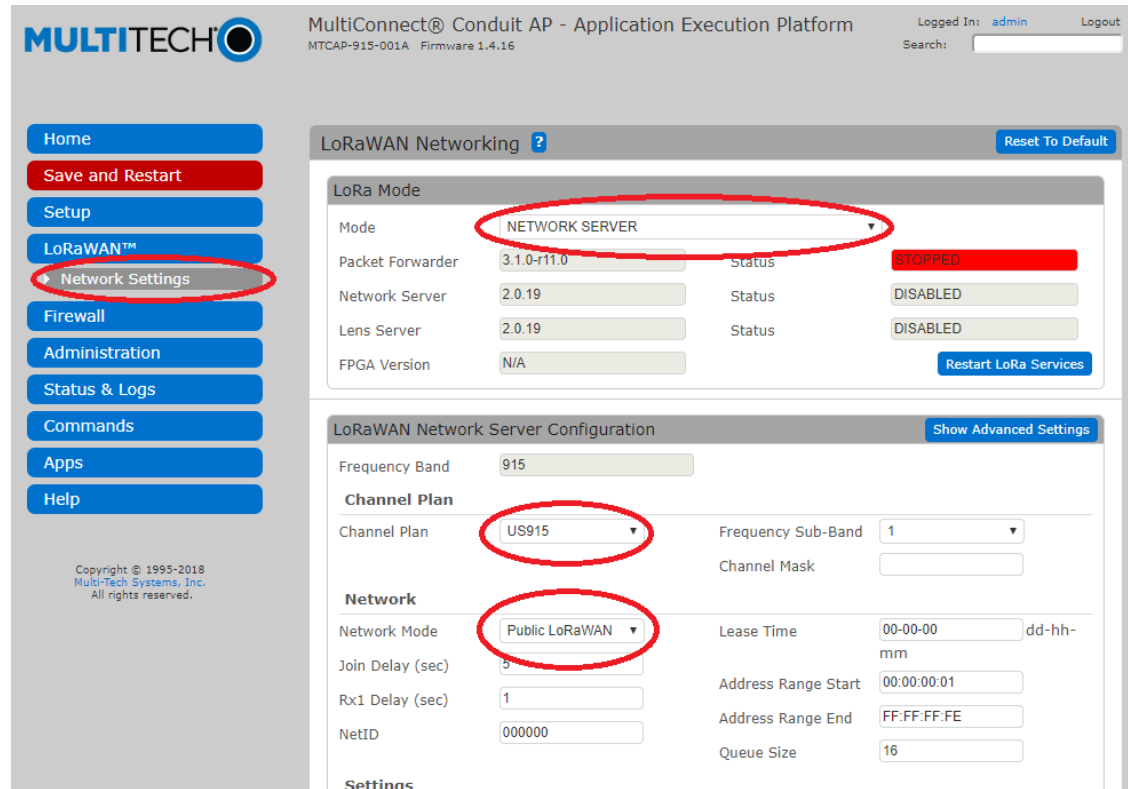

Click on Submit.

Click on Administration -> Access Configuration and check the box “Via WAN” under the SSH heading. Click Submit.

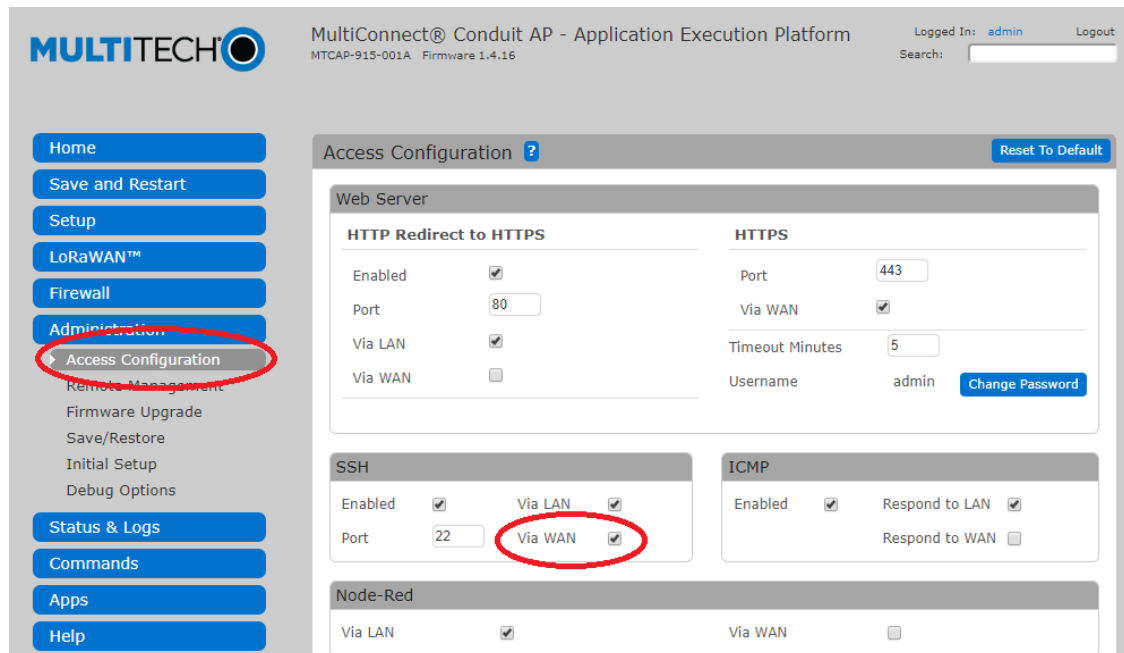

Click Submit.

Go to Firewall->Settings and check the box “Allow Inbound”.

Click Save and Restart.


3.5. Configure Node-RED

Log into the gateway and select Apps -> Launch Node-RED. If the gateway says Node-RED is not enabled, check the enable box. If the link does not connect, verify that “Allow Inbound” is selected under Firewall->Settings.

Go to the Radio Bridge Console and navigate to the gateway that was created in previous steps. Click the “Gateway Setup” button and copy the Node-RED configuration data to your clipboard.

Back in Node-RED, go to the top right menu and select Import->Clipboard. Paste the configuration that you copied in the last step and click Import.


Note that the Node-RED configuration will contain different authentication information for each gateway.

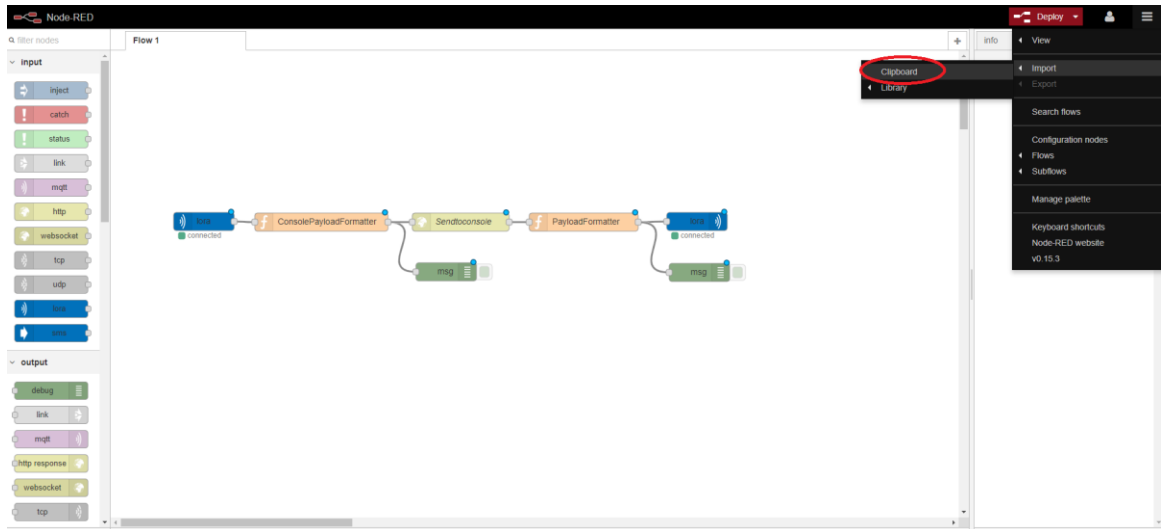

Click on the new tab along the top that was created to view the flow. Click on the red “Deploy” button in the upper right. After a few seconds, the input and output nodes will show that they are connected.

3.6. Add Devices to Gateway

Log into the gateway and go to LoRaWAN -> Key Management. Under Local End-Device Credentials click Add New.

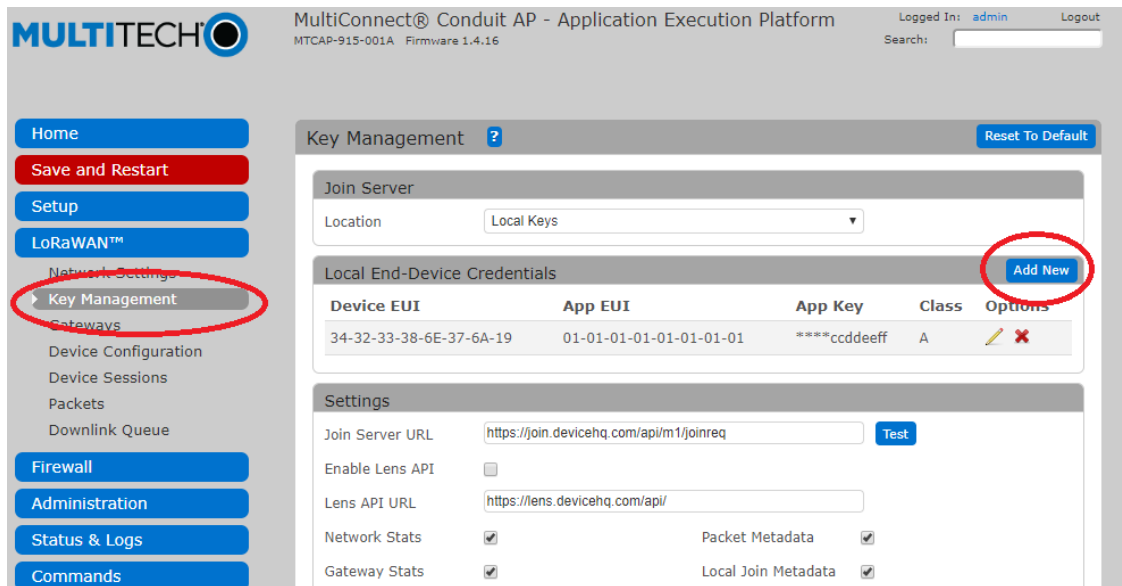

Enter the fields as follows:

Dev EUI: The Device ID listed on your sensor

App EUI: Enter 0101010101010101

App Key: Enter the Key listed on your sensor

Click Finish.

Once you have added all of your devices click on Submit then click Save and Restart.

Note that this only adds the devices to the gateway, they will still need to be added to the Radio Bridge console. Adding a device to the gateway does not automatically add to the console, and adding to the console does not automatically add them to the gateway, so they must be added separately.

3.7. Add Devices to the Console

As mentioned in the previous step, even though the devices have been added to the gateway, they will still need to be added to the Radio Bridge console.

Log into the console and select the Devices tab on the left side of the page and click “Add New Device”. Select “Stand-Alone Gateway” in the Select Network screen. For the ID and Key, use the numbers found on the sensor label which is the same ID/Key pair entered on the gateway.

Radio Bridge sensors can now connect to the console through the stand-alone gateway. Try creating sensor events and verify that you see messages in the console.

4. GENERAL THIRD-PARTY NETWORK SERVER

This section provides the information required to connect the LoRaWAN sensors to a third party LoRaWAN network server not otherwise described in this document. The network server may reside on the gateway itself or in the cloud, and the server may push the data to the Radio Bridge console or another third-party application.

4.1. Sensor to Network Server

The LoRaWAN network server must use the connectivity parameters shown in the following table.

Table 4 LoRaWAN Parameters

LoRaWAN Parameter	Description
Activation Method	OTA (over the air activation). The sensor will send a join request and expect a join accept before any other messages can be sent.
Device EUI	This is the ID on the label located on the sensor itself. The barcode provided can also be used to read the Device EUI.
Application EUI	By default this is set to: 0101010101010101. This can be customized in the factory for production orders, but most customers simply use this default.
Application Key	This is the Key on the label located on the sensor itself. The barcode provided can also be used to read the Application Key.

The sensors will send a join request when the battery is inserted, and if the join fails it will try again once per hour. To force a new join request, remove the battery and replace it. Often it takes a few minutes for LoRaWAN network servers to boot, so if it doesn't connect on the first attempt, wait a few minutes before replacing the battery again.

4.2. Network Server to Radio Bridge Console

The network server may pass data to the Radio Bridge console application or directly to a third-party application. The advantage of the Radio Bridge console is simple provisioning, automatic decode and interpretation of sensor data, a downlink interface for reconfiguring the sensors, database with message history, health status, and a simple API interface. This section describes the steps required to connect a gateway not specifically listed in this document to the Radio Bridge console.

The first step is to create security credentials for a new stand-alone gateway so that it can connect to the Radio Bridge console. Log into the Radio Bridge console at console.radiobridge.com, select the Gateways tab on the left side, and click "Add Gateway". Follow the menu to select the gateway type "Other Gateway".

After the gateway has been created, select "Gateway Setup". Use the API provided with a POST or GET call to send data from a gateway to the console. The response from this call will contain any downlink (sensor configuration information) if a new configuration message is pending. Note that the call has an authorization key that is unique to this gateway.

When adding a new LoRa device, select "Third Party Gateway" and select the name of the gateway you just created. The gateway is now authorized to send sensor data to the console.

5. TRADEMARKS AND COPYRIGHT

Radio Bridge™, SubGig®, and BridgeBee® are trademarks of Radio Bridge Inc in the United States.

© 2018 Radio Bridge Inc. All rights reserved.

6. DISCLAIMERS, WARRANTY, AND CUSTOMER SUPPORT

6.1. Disclaimers

Information in this document is subject to change without notice and does not represent a commitment on the part of Radio Bridge. Radio Bridge provides this document “as is,” without warranty of any kind, expressed or implied, including, but not limited to, the implied warranties of fitness or merchantability for a particular purpose. Radio Bridge may make improvements and/or changes in this manual or in the product(s) and/or the software described in this manual at any time.

6.2. Warranty

To view product warranty information, go to the following website: www.radiobridge.com

6.3. Customer Support

Radio Bridge offers free technical support at:

www.radiobridge.com/forums

Radio Bridge also offers technical support plans and service packages to help our customers get the most out of their Radio Bridge products.

For information on Technical Support plans and pricing, visit us at www.radiobridge.com.